

## Control Panel

- 1 **OK** Select a menu item. Press and hold to turn Control Unit off.
- 2 **← → ↑ ↓** Navigate through menus and menu items.
- 3 **↕** Cycle through numbers and letters when editing.
- 4 **Manual Control Valve**: When pushed, solenoid opens, allowing drive cycle.
- 5 **Regulator**: Turn to increase or decrease pumping pressure.
- 6 **Battery Enclosure**: 4 AA alkaline batteries.
- 7 **Air Out**: Drive line to pump.
- 8 **Air In**: Supply line from compressed gas supply.



- Notes:** 1) The Control Unit does not come with the batteries installed.  
2) Pressing any keypad button will turn the Control Unit on.

## Main Menu

- A Bars indicate amount of time remaining before Unit turns off. Unit will automatically turn off after 5 minutes of being idle.
- B Battery life remaining. Icon will flash at 0% battery.
- C Percentage of battery life remaining.
- D Indicates a menu can be accessed using left cursor.
- E Indicates there is a sub-menu for the active menu item.
- F User Flow Rates: Create, Save, and edit customized drive/vent cycles.
- G LCD Contrast: Adjust contrast of LCD screen.
- H About: Displays installed firmware version.

- I Preset Flow Rates: Select a flow rate with predefined drive and vent cycles:

### PRESET FLOW RATES

Flow	Drive	Vent
Low	50 s	25 s
Med	10 s	8 s
High	3 s	3 s

