

Thermo Scientific AquaSensors DataStick

Suspended solids measurement system

Thermo Scientific™ AquaSensors DataStick measurement system for universal plug & play.

Markets/Applications

- Municipal/industrial wastewater
 - Primary & secondary clarifiers
 - Return activated sludge
 - Waste activated sludge
 - Mixed liquor
 - Aeration basins
 - Final effluent
- Municipal water
- Pulp and paper
- Dairy industry
- Mining industry
- Chemical process



Thermo Scientific™ AquaSensors Suspended Solids DataStick™

- 0 to 20,000 mg/L measurement range
- Fouling correction optics
- Rugged construction
- Local and remote configuration and diagnostics
- Temperature measurement included
- Direct data reporting
- Plug & play industrial communications adapters
- Versatile mounting

Connect this Suspended Solids (TSS) sensor directly to a PLC (Programmable Logic Controller) for seamless integration with industrial control systems. Use any computer to display data, calibrate and customize the measurement without an intermediate analyzer electronics box. This versatile system is ideal for monitoring all solids concentrations throughout a wastewater treatment plant.




Thermo
SCIENTIFIC

Engineering Specifications

- The Suspended Solids sensor shall measure suspended solids or TSS. The TSS measurement range shall be 0 to 20,000 mg/L. Resolution shall be 1.0 mg/L.
- The TSS sensor will include fouling correction optics and will be capable of measuring 180 degree light to compensate 90 degree measurements.
- The sensor shall be constructed of a polycarbonate material with exceptional chemical resistance and mechanical strength. This material shall enable the sensor to be installed in metal fittings without leakage usually caused by heating and cooling cycles when dissimilar materials are threaded together.
- The sensor shall have interchangeable, pre-calibrated plug-in sensor heads and communications adapters that can be installed without powering down the system.
- The sensor shall have 1 inch NPT threads to mount into a standard 2 inch union mounting, immersion or ball-float assembly.
- The built-in electronics of the sensor shall be completely encapsulated and O-ring sealed for protection from moisture and humidity.
- The sensor shall have a built-in pre-amplifier, universal signal conditioning electronics, universal engineering units conversion, and interactive communications with a host computer or display interface using one of several protocols including Modbus® RTU, DeviceNet™, Profibus™, CANopen or USB.
- The sensor shall have an integral temperature sensor to measure temperature independently.
- The sensor shall be the Thermo Scientific AquaSensors RT2 Suspended Solids DataStick.

Thermo Scientific DataStick Analytical System

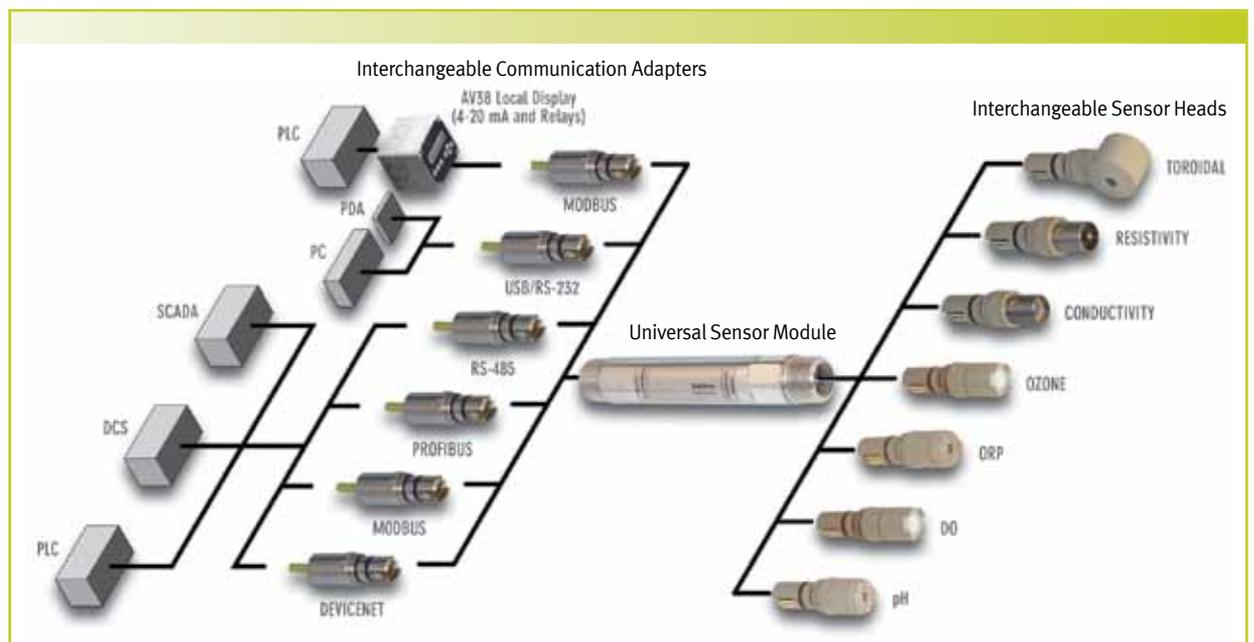

Key Components

Suspended Solids Sensor Head

Pre-calibrated for TTS and temperature. Can be plugged into any DataStick communications adapter for interactive measurement, calibration, configuration and diagnostics with industrial computers or AquaSensors AV38 local display.



Wash Head

In applications where the sensor head is quickly fouled with sediment, a wash head assembly can be attached. The head slips on the body of the sensor and the wash nozzle is aligned with the sensor fingers. A single screw is tightened to secure the wash head to the sensor. A hose is connected from the wash head to an air compressor or water source. Actuation is controlled by an AV38 wash relay that is programmed with a wash interval and duration.



Communications Adapter

Plugs into the DataStick to provide power and direct interactive communications with control systems.



AV38 Local Display/Controller



2 line display and 7 key navigation. Data reporting with up to 2 current outputs. 2 Form C relays. Digital communications.



Thermo Scientific AquaSensors Suspended Solids DataStick

Sensor Mounting Accessories Include:

- Optional handrail mounting hardware assembly.
- Submersion extension pipe is available to install submersion style sensors.
- A stainless steel ball valve assembly with neoprene O-rings is offered for insertion style sensor installation. The assembly includes safety restrictor rods to limit sensor retraction, and position bolts to secure the fully inserted sensor.

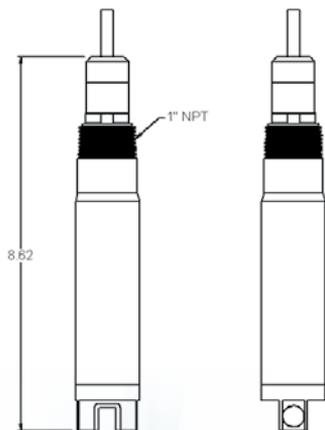

1.5 Inch Ball Valve


1.5 Inch Union Mounting



Ball Float Assembly



1 Inch Immersion Mounting with Junction Box (7 Foot Extension is Standard)

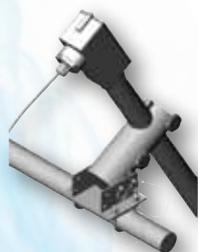

Hand Rail Mounting Assembly

Specifications	
Measurement System Performance[†]	Range: 0 to 20,000 mg/L (diatomaceous earth) Resolution: 1 mg/L Step Response Time: 90 % in 15 seconds
Operational Environment	Temperature Range: -5 °C to 50 °C Maximum Pressure: 150 psig @ 50 °C Maximum Flow Rate: 10 ft/second
Power Requirements[‡]	Voltage Range: 10 to 30 VDC Maximum Power: 200 mW Typical Power: 120 mW
Construction	Windows: Quartz Optical Topology: 1 cm path lengths for measurement and reference. Detectors at 90 degrees and 180 degrees to source O-rings: Viton [®] (other materials available) Sensor Head Material: Polycarbonate Weight: 1.2 lbs
Units Of Measure	Suspended Solids: mg/L, ppm, % Temperature Units: °C, °F
Calibration^{††}	Sample: 1 point Zero: 1 point Temperature: 1 point
Measurement Modes	Measurement Units: Detected at 90 degrees and 180 degrees Temperature: Automatic from -5 °C to 50 °C
Other Configuration Options	Sensor Filter: 0 to 100 seconds Temperature Filter: 0 to 100 seconds
Approvals And Ratings	Immunity & Emissions: CE certified 89/336/EEC: CISPER 11, EN61000 (-4-2, -4-3, -4-4, -4-6, 4-8) Safety: cULus listed; 367G E303570 Hazardous Locations: Haz Loc Class 1, Division 2, Groups A, B, C, D. Max ambient 50 °C

[†] Note: Typical at 25 °C performance unaffected by cable length

[‡] Note: Class II DC power supply required

^{††}Note: Turbidity and temperature are pre-calibrated at the factory

Thermo Scientific AquaSensors Suspended Solids DataStick

- **Global support**—with experience that comes from supporting our customers for over 35 years throughout the world, our water quality specialists and customer support teams offer a quick, thorough and professional response to any problem encountered.
- **Focus on user benefits**—we work closely with you to define your needs, and ensure you are using the monitor in a way that improves your bottom line. For more information, contact your local water quality specialists or visit: www.thermoscientific.com/processwater.

Suspended Solids DataStick Ordering Information

Part No.	Description
RT-b-x-y-z	DataStick and Communications
Measurement Mode (b)	2 = Suspended solids
Back-Body and Communications Material (x)	1 = CPVC 2 = 316 stainless steel
Communications (y)	4 = Modbus RTU 5 = DeviceNet 6 = CANopen 7 = Ethernet 8 = USB
Cable Length (z)	1 = 10 feet 2 = 20 feet 3 = 30 feet

Accessories Ordering Information

Part No.	Description
MH1222	Wash head assembly
Local Display/Controller Interface	
AV38	¼ DIN, outputs, relays, digital communications options
Mounting Hardware	
MH1042-RT	1.5 inch union mounting, CPVC
MH1041-RT	1.5 inch union mounting, 316 SS
MH1112	1.5 inch ball valve, CPVC, low pressure
MH1111	1.5 inch ball valve, 316 SS, low pressure
MH1122	1.5 inch ball valve, CPVC, high pressure
MH1121	1.5 inch ball valve, 316 SS, high pressure
MH1042	Hand rail mounting assembly, swivel/immersion, PVC
MH1052	Hand rail mounting assembly, swivel/immersion with ball float
MH3083	1 inch immersion mounting with junction box, PVC (7 foot extension is standard)

Consult factory for additional configurations and accessories.



thermoscientific.com/processwater

© 2013 Thermo Fisher Scientific Inc. All rights reserved. Viton is a registered trademark of E. I. Du Pont De Nemours & Company. Modbus is a registered trademark of Schneider Electric. DeviceNet is a trademark of ODVA. Profibus is a trademark of Profibus Nutzerorganisation e.V. All other trademarks are the property of Thermo Fisher Scientific Inc. and its subsidiaries.



Water Analysis Instruments

North America
Toll Free: 1-800-225-1480
Tel: 1-978-232-6000
info.water@thermo.com

Netherlands
Tel: (31) 033-2463887
info.water.uk@thermo.com

India
Tel: (91) 22-4157-8800
wai.asia@thermofisher.com

Japan
Tel: (81) 045-453-9175
wai.asia@thermofisher.com

China
Tel: (86) 21-68654588
wai.asia@thermofisher.com

Singapore
Tel: (65) 6778-6876
wai.asia@thermofisher.com

Australia
Tel: (613) 9757-4300
in Australia (1300) 735-295
InfoWaterAU@thermofisher.com

Thermo
SCIENTIFIC

Part of Thermo Fisher Scientific